


































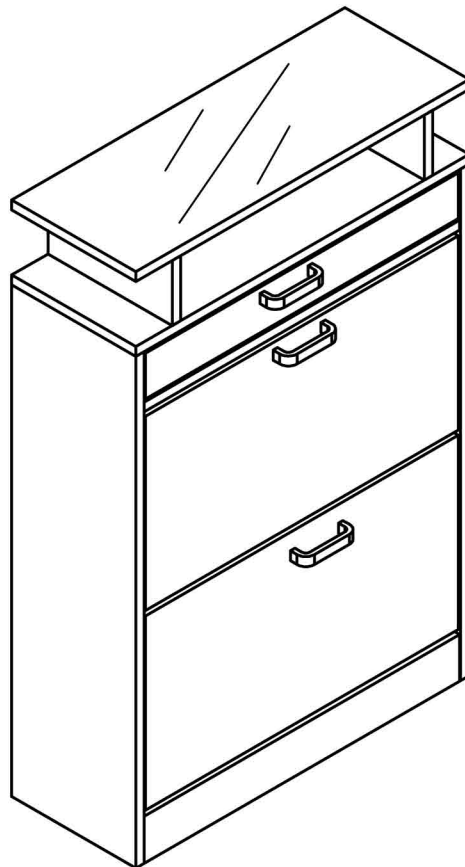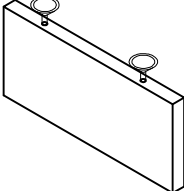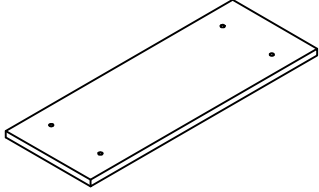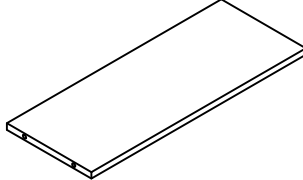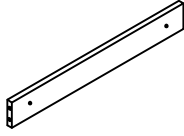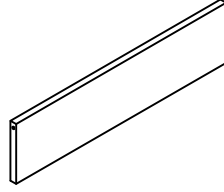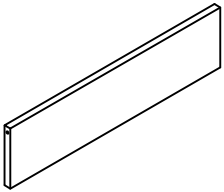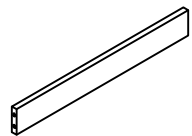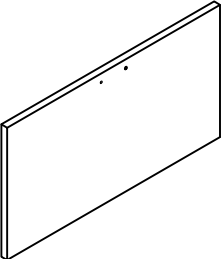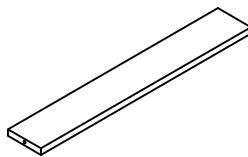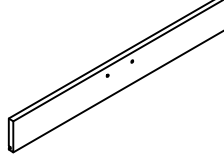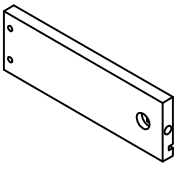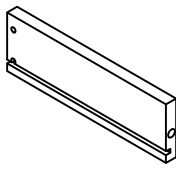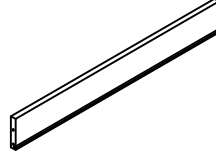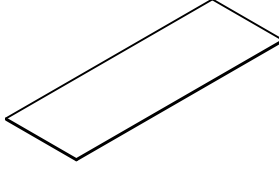


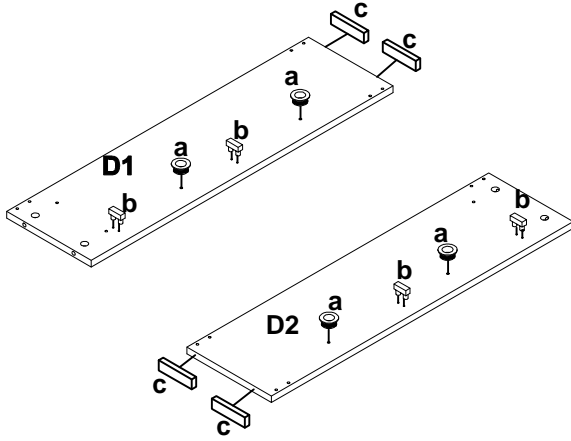
Schuhschrank "Braso"
Montageanleitung
Instruction manual

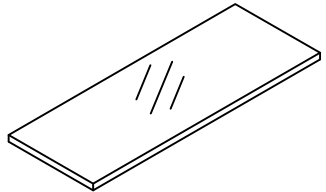

VCM Morgenthaler GmbH
D-79346 Endingen am Kaiserstuhl
service@vcm-gruppe.de
www.vcm-gruppe.de


A  x2		B  x1		C  x1		D1  x1			
D2  x1		E1  x1		F  x2		G  x2			
		E2  x2							
H  x2		I  x2		J  x1		K1  x1			
K2  x1		L  x1		M  x1		N  x1			
a	x4	b	x4	c	x4	d	x22	e1	x20
									
e2	x2	f	x6	g	x29	h	x1	i	x2
		 Ø4x35mm		 Ø4x12mm					
j	x2	k	x6	l	x3	m	x4	n	x2
									
o	x4								
 Ø7x40mm									

01




a	x4	b	x4	c	x4

02

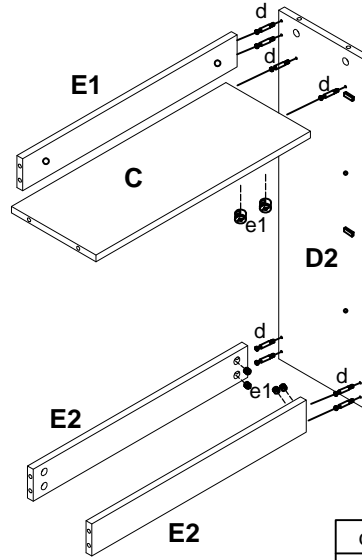


d	x8	e1	x8

03

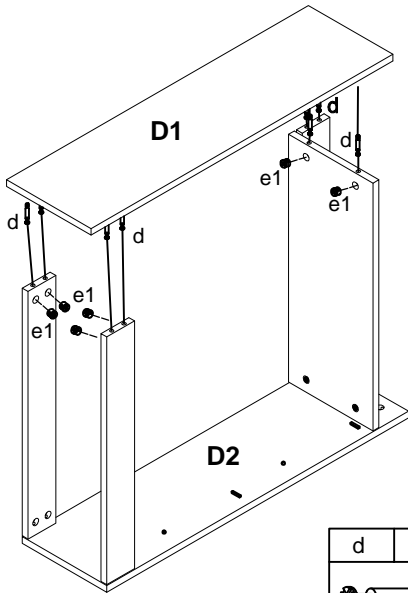


d	x8	e1	x8

04

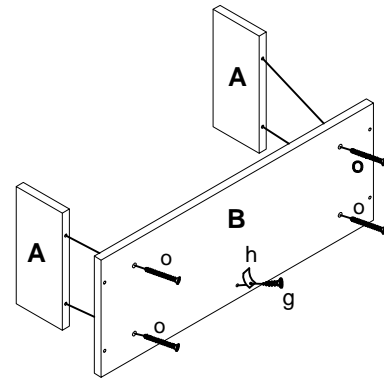


o	x4	g	x1	h	x1
Ø7x40mm		Ø4x12mm			

05

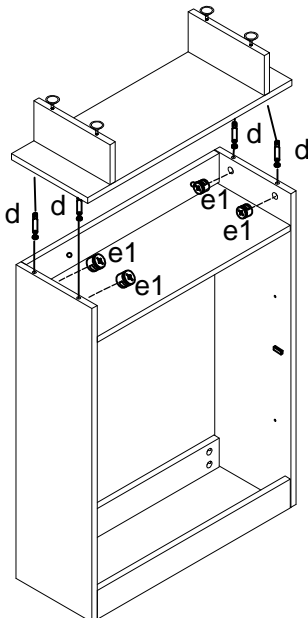

d	x4
e1	x4


06

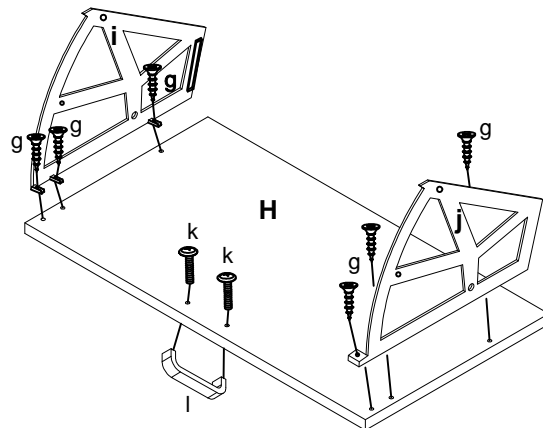


x2

g	x12	i	x2	j	x2	k	x4	l	x2
Ø4x12mm									


07

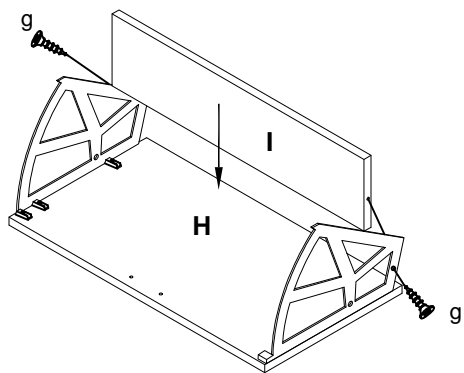


x2

g	x4
	
Ø4x12mm	


08

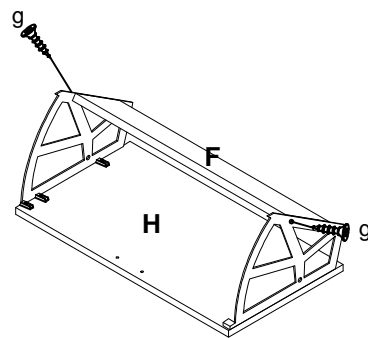



x2


g	x4
	
Ø4x12mm	

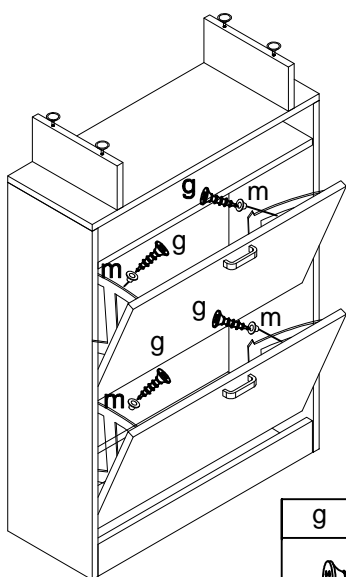
09




g	x4	m	x4
			
Ø4x12mm			


10

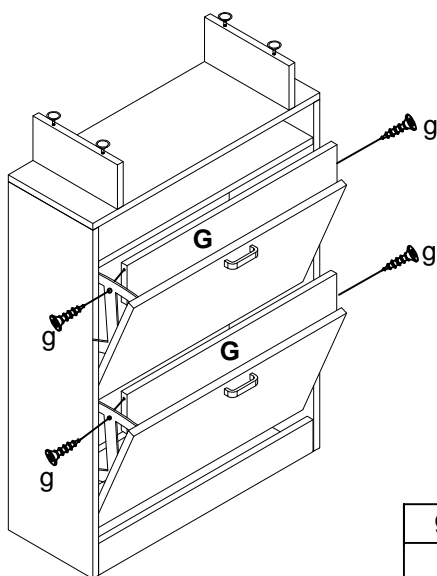


g	x4
	
Ø4x12mm	

11

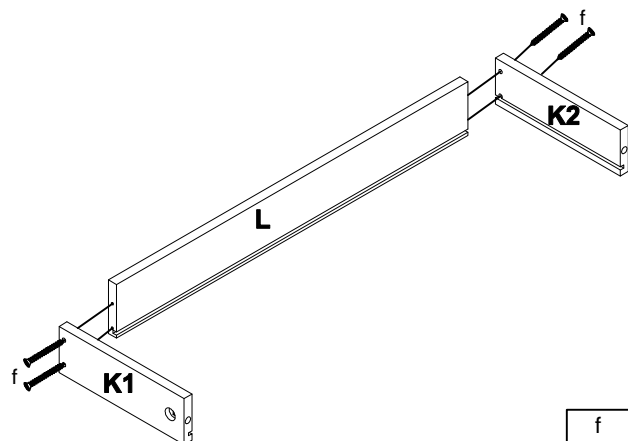


f	x4
	
Ø4x35mm	

12

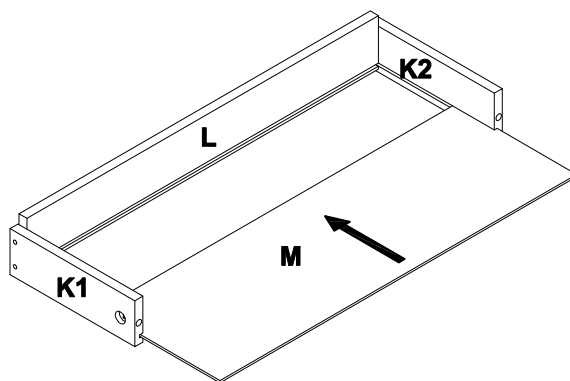


13

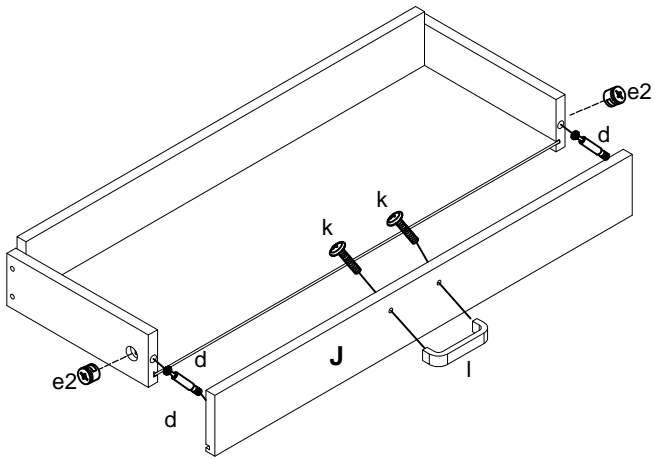


d	x2	e2	x2	k	x2	I	x1


14

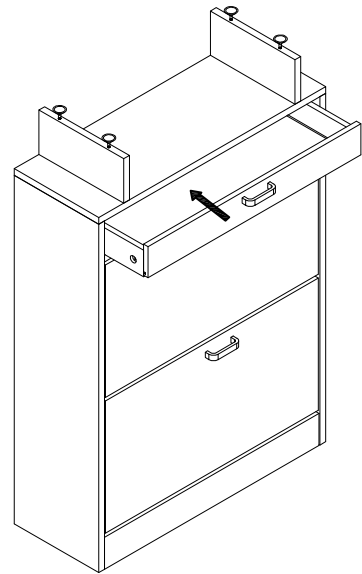

15

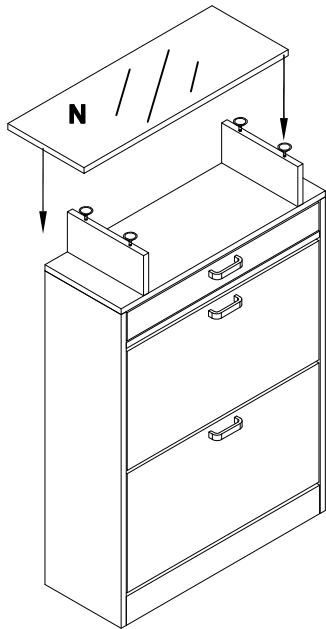


16

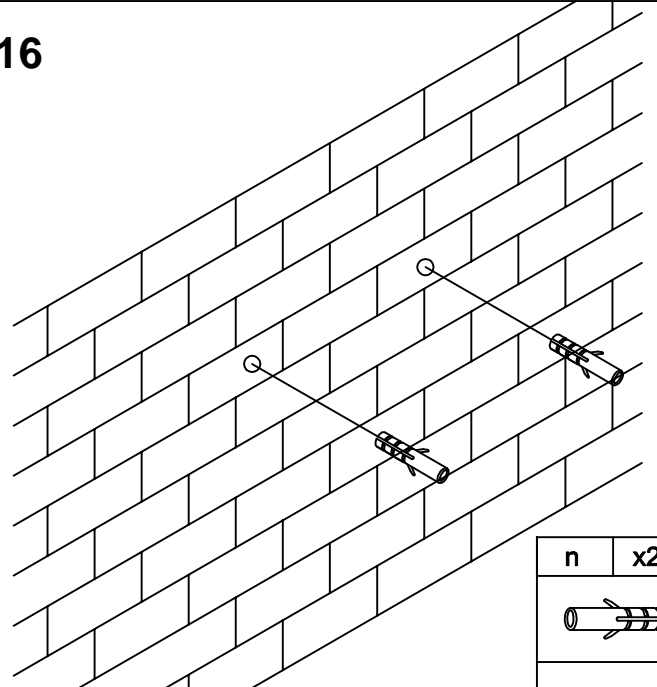

n	x2

17

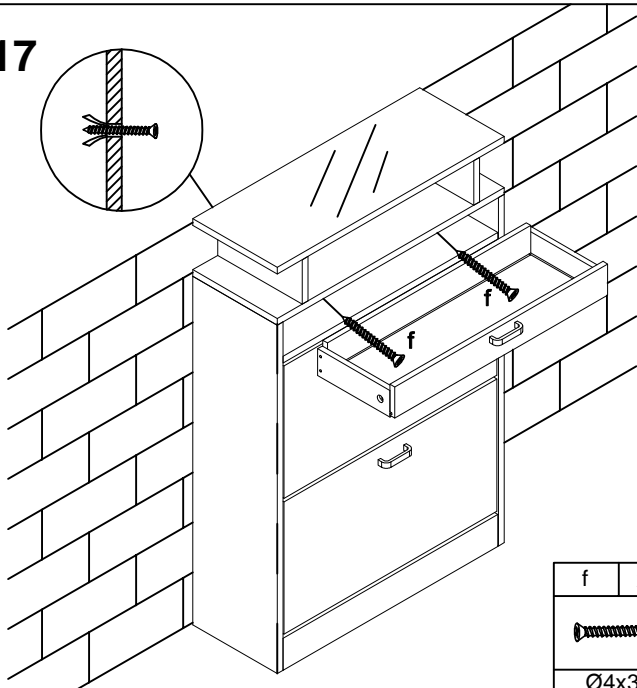

f	x2
Ø4x35	

18

